

Printer Compatibility List for DPR-1020, DPR-1040, DPR-1061, DPR-2000

*Confirm that HP LaserJet 1020 can work through DPR-1020 in Windows 7.
DPR-1020 Firmware: v1.00 (2008-11-03)
PS-Software: v1.20*

The following printers are new in this update.

1. EPSON Stylus TX200
2. EPSON Stylus TX210
3. EPSON Stylus TX410
4. EPSON Stylus Office TX300F
5. EPSON Stylus T20
6. EPSON Stylus T21
7. EPSON Stylus Photo T50
8. EPSON Stylus Office T1100
9. EPSON Stylus Photo R1900
10. EPSON Stylus TX510FN
11. EPSON Stylus TX550W
12. EPSON Stylus TX610FW
13. EPSON Stylus Office TX700W
14. EPSON Stylus Photo TX800FW
15. EPSON PM-A840S
16. HP Color LaserJet 2605
17. HP LaserJet P1005
18. HP LaserJet P1006
19. HP Color LaserJet CP1215
20. HP Deskjet F4280
21. HP Photosmart C5380
22. HP Officejet J4580
23. Canon MP198
24. Canon MP268
25. HP Photosmart C5280
26. Canon PIXMA MX318
27. Canon PIXMA MX308
28. Canon PIXMA MP520
29. Canon PIXMA MP145
30. EPSON Stylus CX7300
31. EPSON Stylus CX8300
32. EPSON Stylus CX5500
33. EPSON Stylus CX9300F
34. EPSON Stylus Photo RX690
35. HP Diskjet F2180
36. HP Diskjet F4185
37. HP Photosmart 2575
38. HP Photosmart C4280
39. Samsung SCX4321
40. Canon PIXMA MP180
41. 2. EPSON Stylus Photo RX580
42. 3. EPSON Stylus Photo RX530

Printer Compatibility List for DPR-1020, DPR-1040, DPR-1061, DPR-2000

MFP Supported on Windows 2000 SP4 and Windows XP

1. Avision MF3100L
2. Benq CM3000
3. Brother MFC-210C
4. Brother MFC-420CN
5. Brother MFC-3240C
6. Brother MFC-7220
7. Canon PIXMA MX318
8. Canon PIXMA MX308
9. Canon PIXMA MP520
10. Canon PIXMA MP145
11. Canon PIXMA MP110
12. Canon PIXMA MP150
13. Canon PIXMA MP160
14. Canon PIXMA MP170
15. Canon PIXMA MP180
16. Canon PIXMA MP450
17. Canon PIXMA MP460
18. Canon PIXMA MP500
19. Canon PIXMA MP510
20. Canon PIXMA MP530
21. Canon PIXMA MP600
22. Canon PIXMA MP810
23. Canon PIXMA MP830
24. Canon PIXMA MP950
25. Canon PIXMA MP960
26. Canon MP198
27. Canon MP268
28. Dell Photo 926
29. Dell Photo 966
30. EPSON PM-A840S
31. EPSON PM-A970
32. EPSON PM-A920
33. EPSON PM-A820
34. EPSON PM-A720
35. EPSON PM-A950
36. EPSON PM-A890
37. EPSON PM-A750
38. EPSON PM-A650
39. EPSON Stylus CX7300
40. EPSON Stylus CX8300
41. EPSON Stylus CX5500
42. EPSON Stylus CX9300F
43. EPSON Stylus CX2900
44. EPSON Stylus CX3700
45. EPSON Stylus CX3900
46. EPSON Stylus CX4100
47. EPSON Stylus CX4700
48. EPSON Stylus CX4900
49. EPSON Stylus CX5700F
50. EPSON Stylus CX5900

Printer Compatibility List for DPR-1020, DPR-1040, DPR-1061, DPR-2000

51. EPSON Stylus CX6900F
52. EPSON Stylus Photo RX690
53. EPSON Stylus Photo RX530
54. EPSON Stylus Photo RX580
55. EPSON Stylus Photo RX590
56. EPSON Stylus Photo RX630
57. EPSON Stylus Photo RX650
58. EPSON Stylus TX200
59. EPSON Stylus TX210
60. EPSON Stylus TX410
61. EPSON Stylus Office TX300F
62. EPSON Stylus TX510FN
63. EPSON Stylus TX550W
64. EPSON Stylus TX610FW
65. EPSON Stylus Office TX700W
66. EPSON Stylus Photo TX800FW
67. EPSON Stylus T20
68. EPSON Stylus T21
69. EPSON Stylus Photo T50
70. EPSON Stylus Office T1100
71. EPSON Stylus Photo R1900
72. EPSON Stylus Office T40W
73. Fuji Xerox WorkCentre 3119
74. HP LaserJet P1005
75. HP LaserJet P1006
76. HP Color LaserJet CP1215
77. HP Color LaserJet 2605
78. HP Diskjet F2180
79. HP Diskjet F4185
80. HP Deskjet F380
81. HP Deskjet F4280
82. HP PSC1315
83. HP Photosmart C5280
84. HP Photosmart 2575
85. HP Photosmart C4280
86. HP Diskjet F4185
87. HP Deskjet F380
88. HP Deskjet F4280
89. HP PSC1315
90. HP Photosmart C5280
91. HP Photosmart 2575
92. HP Photosmart C4280
93. HP Photosmart C1350
94. HP Photosmart C1610
95. HP Photosmart C3180
96. HP Photosmart C4180
97. HP Photosmart C5180
98. HP Photosmart C5380

Printer Compatibility List for DPR-1020, DPR-1040, DPR-1061, DPR-2000

99. HP OfficeJet 4255
100. HP OfficeJet 4355
101. HP OfficeJet 5510
102. HP OfficeJet 5610
103. HP OfficeJet 6110
104. HP OfficeJet 7210
105. HP Officejet J4580
106. HP LaserJet 3050
107. Lexmark x3470
108. Lexmarkx5470
109. Samsung SCX4321
110. Samsung SCX-4100
111. Samsung SCX-4200
112. Avision MF3100L
113. Benq CM3000
114. Brother MFC-210C
115. Brother MFC-420CN, MFC-3240C, MFC-7220
116. Canon PIXMA MX318, MX308, MP520, MP145, MP110, MP150, MP160, MP170, MP180, MP450, MP460, MP500, MP510, MP530, MP600, MP810, MP830, MP950, MP960, MP198, MP268
117. Epson Photo 926, Photo 966, PM-A840S, PM-A970, PM-A920, PM-A820, PM-A720, PM-A950, PM-A890, PM-A750, PM-A650, Stylus CX7300, Stylus CX8300, Stylus CX5500 Stylus CX9300F, Stylus CX2900, Stylus CX3700, Stylus CX3900, Stylus CX4100, Stylus CX4700, Stylus CX4900, Stylus CX5700F, Stylus CX5900, Stylus CX6900F, Stylus Photo RX690, Stylus Photo RX530, Stylus Photo RX580, Stylus Photo RX590, Stylus Photo RX630, Stylus Photo RX650, Stylus Photo RX690, Stylus TX200, Stylus TX210, Stylus TX410, Stylus Office TX300F, Stylus TX510FN, Stylus TX550W, Stylus TX610FW, Stylus Office TX700W, Stylus Photo TX800FW, Stylus T20 Stylus T21, Stylus Photo T50 Stylus Office T1100, Stylus Photo R1900, Stylus Office T40W
118. Fuji Xerox WorkCentre 3119
119. HP LaserJet P1005, LaserJet P1006, Color LaserJet CP1215, Color LaserJet 2605, DeskJet F2180, DeskJet F4185, Deskjet F380, Deskjet F4280 PSC1315, Photosmart C5280, Photosmart 2575, Photosmart C4280, Photosmart C1350, Photosmart C1610 Photosmart C3180, Photosmart C4180, Photosmart C5180, Photosmart C5380, LaserJet 3050, Officejet J4580, LaserJet 1020